


RENTAL - SALES - PARTS & SERVICE Tel: (888) 337-BIGGE or (510) 638-8100 Web: www.bigge.com








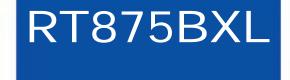




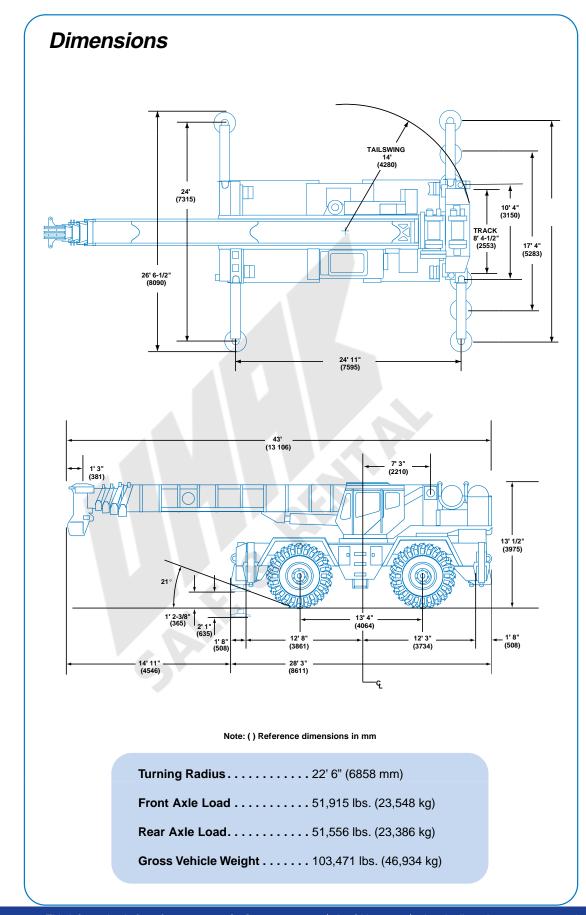







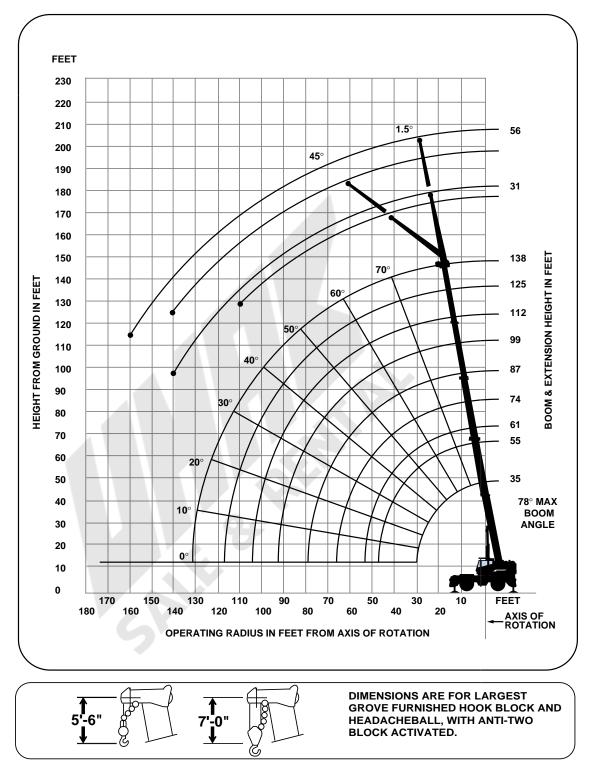

Bigge 🛕

This information is for reference use only. Operators manual should be consulted and adhered to. Please contact Bigge Crane and Rigging Co. at 888-337-BIGGE or email info@bigge.com for further information.

🛕 Bigge

# Superstructure specifications

#### Boom

35 ft. - 138 ft. (10.6 m - 42 m) five-section full power boom. Maximum Tip Height: 148 ft. (45.1 m).

#### **Folding Lattice Extension**

31 ft. - 56 ft. (9.4 m - 17 m) bi-fold lattice swingaway extension offsettable at 1.5° or 45° Stows alongside base section. Maximum Tip Height: 204 ft. (62.1 m).

#### \*Optional Lattice Extension

31 ft. (9.4 m) lattice swingaway extension. Offsettable at 1.5° or 45°. Stows alongside base boom section. Maximum Tip Height: 179 ft. (54.5 m).

#### **Boom Nose**

Five Nylatron sheaves mounted on heavy duty tapered roller bearings with removable pin-type rope guards. Quick reeving type boom nose. A removable auxiliary boom nose with removable pin type rope guard.

#### **Boom Elevation**

One double acting hydraulic cylinder with integral holding valve provides elevation from -3° to 78°.

#### Load Moment & Anti-Two Block System

Standard load moment and anti-two block system with audio-visual warning and control lever lockout. These systems provide electronic display of boom angle, length, radius, tip height, relative load moment, maximum permissible load and load indication and warning of impending two-block condition.

#### Cab

Full vision, all galvanealed steel fabricated with acoustical lining and tinted safety glass throughout. Deluxe seat with armrest mounted hydraulic single axis controllers. Dash panel incorporates gauges for engine functions. Other standard features include: skylight screen,

hydraulic oil cab heater/defroster, telescoping tilt wheel, sliding side and rear windows, opening

skylight, electric windshield wash-wipe, electric skylight wipers, fire extinguisher, seat belt, ashtray and level indicator.

#### Swing

Planetary swing with foot applied multi-disc wet brake. Spring applied, hydraulically released swing brake, 360° positive swing lock (N.Y.C. style) and 1 position, mechanical house lock, operated from cab.

Maximum speed: 2.0 RPM.

#### Counterweight

Removable: 8,500 lbs. (3855 kg). 2,155 lbs. (977 kg) slab I.P.O. auxiliary hoist.

#### Hydraulic System

Seven main pumps with a combined capacity 199.2 GPM (754 LPM). Maximum operating pressure 3500 psi (241 bar). Three individual valve banks. Return line type filter with full flow by-pass protection and service

indicator. Replaceable cartridge with micron filtration rating of 5/12/16. 200 gallons (757 L) reservoir. Remote mounted oil cooler with thermostatically controlled hydraulic motor driven fan/air to oil. System pressure test panel with quick release type fittings for each circuit.

#### Hoist Specifications Main and Auxiliary Hoist

Planetary reduction with automatic spring applied multi-disc brake. Electronic hoist drum rotation indicator, hoist drum cable followers and wire rope.

Maximum Single Line Pull: 16.969 lbs. (7697 kg) Maximum Single Line Speed: 385 FPM (117 m/min) Maximum Permissible 12,920 lbs. Line Pull: (5860 kg) 3/4 in. Rope Diameter: (19 mm) Rope Length: 620 ft. (190 m) 1,163 ft. Maximum Rope Stowage: (354.5 m)

Bigge



# **Carrier specifications**

#### Chassis

Box section frame fabricated from high-strength, low alloy steel. Integral outrigger housings and front/rear towing and tie down lugs.

### **Outrigger System**

Four hydraulic telescoping single-stage double box beam outriggers with inverted jacks and integral holding valves. Three position setting. All steel fabricated quick release type outrigger floats, 30.5" (77.5 mm) diameter. Maximum outrigger pad load: 94,000 lbs. (42 638 kg).

Outrigger Controls

Controls and crane level indicator located in cab.

### Engine

Cummins 6CTA 8.3 diesel, six cylinders, turbocharged, 250 bhp (186 kW) (Gross) @ 2,200 RPM. Maximum torque: 794 ft. lbs. (1077 Nm) @ 1,500 RPM.

#### **\*Optional Engine**

Caterpillar 3126TA diesel, six cylinders, turbocharged, 250 bhp (186 kW) (Gross) @ 2,500 RPM. Maximum torque: 686 ft. lbs. (930 Nm) @ 1,650 RPM.

#### **Fuel Tank Capacity**

80 gallons (303 L)

#### Transmission

Full powershift with 6 forward and 6 reverse speeds. Rear axle disconnect for 4 x 2 travel.

#### **Electrical System**

Two 12 V - maintenance free batteries. 24 V starting and lighting.

#### Drive

4 x 4.

#### Steering

 Fully independent power steering:

 Front:
 Full hydraulic steering wheel controlled.

 Rear:
 Full hydraulic hand lever controlled.

 Provides infinite variations of 4 main steering modes: front only, rear only, crab and coordinated.

 Rear steer indicating gauge.

#### Axles

 Front:
 Drive steer with differential and planetary

 reduction
 hubs rigid mounted to frame.

 Rear:
 Drive/steer with differential and planetary

 reduction
 hubs pivot mounted to frame.

 Automatic full hydraulic lockouts on rear axle.

#### **Oscillation Lockouts**

Automatic full hydraulic lockouts on rear axle permits oscillation only with boom centered over the front.

#### **Brakes**

Full air split circuit operating on all wheels. Spring-applied, air released front and rear axles.

#### Tires

Std. 33.25 x 29 - 32PR earthmover type. \*Optional: 33.25R29 radial.

#### Lights

Full lighting including turn indicators, head, tail, brake, and hazard warning lights.

## **Maximum Speed**

25 MPH (40 kph).

## Gradeability (Theoretical)

87% based on 102,840 lbs. (46 648 kg) GVW.
33.25 x 29 tires, pumps disengaged, 138 ft. (42 m) boom, plus 31 ft. (9.4 m) swingaway.

### **Miscellaneous Standard Equipment**

Full width steel fenders, dual rear view mirrors,

hookblock tiedown, electronic back-up alarm, light package, front stowage well, tachometer/hourmeter, cold start aid (less canister), rear wheel position

indicator, hydraulic cab heater, hoist mirrors, engine distress A/V warning system, tire inflation kit.

# \*Optional Equipment

- **Popular Option Package** cab controlled craoss axle differential locks front and rear.
- \* Auxiliary Lighting Package cab mounted remote controlled worklights, cab mounted amber flashing light, hoist mounted worklight, and dual base boom mounted floodlights.
- \* **Convenience Package** includes immersion type engine block heater (120 V, 1500 watt), in-cab LMI light bar, and auto-grease system for turntable.

\*Denotes optional equipment





# RATED LIFTING CAPACITIES IN POUNDS WITH COUNTERWEIGHT 35 FT. - 138 FT. BOOM

Radius					#0001				
in				Main E	Boom Length i	in Feet			
Feet	35	55	61	74	87	99	112	125	138
10	+150,000 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)					
12	106,500 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)				
15	90,050 (56)	79,100 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)			
20	68,300 (44.5)	67,350 (64.5)	59,850 (67.5)	44,350 (71.5)	39,550 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)	
25	52,250 (29.5)	51,150 (58)	51,450 (62)	38,750 (67.5)	33,800 (71.5)	32,100 (74.5)	30,050 (77)	20,150 (79)	*19,000 (80)
30		39,200 (51)	39,450 (56.5)	34,200 (63)	29,200 (68)	30,200 (71.5)	27,350 (74.5)	19,100 (76.5)	18,300 (78.5)
35		31,000 (43.5)	31,300 (50)	29,050 (58.5)	25,800 (64)	26,600 (68.5)	24,300 (71.5)	18,100 (74)	17,650 (76.5)
40		25,050 (34.5)	25,350 (43)	25,150 (53.5)	22,900 (60)	23,450 (65)	21,600 (69)	17,250 (72)	17,000 (74)
45		20,500 (21.5)	20,800 (35)	20,600 (48.5)	20,000 (56)	20,450 (61.5)	19,250 (66)	16,450 (69)	16,350 (72)
50			17,250 (24.5)	16,850 (42.5)	16,900 (52)	17,900 (58.5)	16,900 (63)	15,750 (66.5)	15,700 (69.5)
60				10,500 (28)	10,600 (42.5)	11,800 (51)	13,000 (57)	13,100 (61.5)	13,300 (65)
70					6,500 (30)	7,670 (42.5)	8,860 (50)	10,050 (56)	11,050 (60)
80						4,710 (32)	5,910 (42.5)	7,090 (49.5)	8,290 (55)
90						2,390 (15.5)	3,690 (33.5)	4,880 (43)	6,060 (49.5)
100							1,910 (21)	3,170 (35)	4,340 (43)
110								1,810 (24.5)	2,970 (36)
120									1,860 (27)
			16	18					
		aximum boon	0 ( )	0 degree boo	om angle (no l	oad)		11	12

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

+12 parts line required to lift this capacity (using aux. boom nose). Refer to reeving diagram.

	Lifting Capacities On Outriggers Fully Extended - 360° At Zero Degree Boom Angle											
Boom		Main Boom Length in Feet										
Angle	35	55	61	74	87	99	112					
0°	27,400 (28.2)	12,850 (47.4)	10,400 (53.8)	6,290 (66.6)	3,380 (79.4)	1,970 (92.2)	1,170 (105)					
NOTE: ( ) F	Reference radi	ii in feet.						A6-	829-016119A			

NOTE: () Reference radii in feet.

	Boom Extension Sequence in %											
Inner-Mid	0	50	50	75	100	100	100	100	100			
Mid	0	25	50	75	100	100	100	100	100			
Outer-Mid	0	0	0	0	0	25	50	75	100			
Fly	0	0	0	0	0	25	50	75	100			

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and underslood prior to operating the crane.

BİGGE



# 31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 125 FT. MAIN BOOM ON OUTRIGGERS FULLY EXTENDED - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	.ENGTH	
Radius in	#0021	#0023	#0041	#0043	
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET	
30	*11,500 (80)				
35	11,500 (78.5)				
40	11,500 (77)		6,950 (79.5)		
45	11,500 (75)	*8,000 (80)	6,780 (78.5)		
50	11,000 (73.5)	6,810 (78.5)	6,620 (77)		
60	10,050 (70)	6,490 (74.5)	6,290 (74)		
70	9,220 (66)	6,400 (70.5)	5,960 (71)	*3,700 (80)	
80	8,440 (62)	6,350 (66)	5,640 (67.5)	3,520 (76.5)	
90	6,900 (57.5)	6,340 (61.5)	5,260 (64.5)	3,400 (72.5)	
100	5,090 (53)	5,860 (56.5)	4,980 (60.5)	3,290 (68.5)	
110	3,640 (47.5)	4,180 (51)	4,630 (56.5)	3,190 (64)	
120	2,450 (41.5)		3,420 (52)	3,110 (59.5)	
130	1,450 (34.5)		2,360 (47.5)	3,040 (54)	
140			1,460 (42.5)		
Minimum boom angle (deg.) for indicated length (no load)	33	45	39	49	
Maximum boom length (ft.) at 0 degree boom angle (no load)	98	7	74		

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths less than 125 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

THIS CHART IS ONLY & GUIDE AND SHOULD NOT BE LISED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.





# 31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 138 FT. MAIN BOOM ON OUTRIGGERS FULLY EXTENDED - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	ENGTH	
Radius in	#0021	#0023	#0041	#0043	
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET	
35	9,500 (79.5)				
40	9,500 (78)		*5,500 (80)		
45	9,500 (76.5)		5,400 (79.5)		
50	9,500 (75)	*7,800 (80)	5,300 (78)		
60	9,110 (71.5)	6,740 (77)	5,100 (75.5)		
70	8,450 (68.5)	6,460 (73.5)	4,900 (72.5)	*3,600 (80)	
80	7,550 (64.5)	6,350 (69.5)	4,700 (69.5)	3,500 (77.5)	
90	6,990 (60.5)	6,280 (65.5)	4,500 (66.5)	3,400 (74)	
100	5,480 (56.5)	6,220 (61)	4,300 (63.5)	3,300 (70.5)	
110	3,980 (52)	4,710 (56.5)	4,100 (59.5)	3,200 (67)	
120	2,750 (47)	3,320 (51)	3,650 (56)	3,100 (63)	
130	1,740 (41.5)		2,690 (52)	3,000 (58.5)	
140			1,870 (47.5)	2,540 (53.5)	
150			1,130 (42.5)		
Minimum boom angle (deg.) for indicated length (no load)	37 45		42	47	
Maximum boom length (ft.) at 0 degree boom angle (no load)		7	74		
NOTE: () Boom angles	are in degre	es.	A6-	829-014897	

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths between 125 ft. and fully extended with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load charl, operating instructions and other instructional plates must be read and underslood prior to operating the crane.

BİGGE 



# RATED LIFTING CAPACITIES IN POUNDS WITH COUNTERWEIGHT 35 FT. - 138 FT. BOOM

Radius					#4001					
in				Main B	oom Length	in Feet				
Feet	35	55	61	74	87	99	112	125	138	
10	115,000 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)						
12	101,500 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)					
15	86,150 (56)	79,100 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)				
20	62,850 (44.5)	56,100 (64.5)	55,000 (67.5)	44,350 (71.5)	39,550 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)		
25	39,750 (29.5)	37,950 (58)	38,300 (62)	35,950 (67.5)	33,800 (71.5)	32,100 (74.5)	30,050 (77)	20,150 (79)	*19,000 (80)	
30		26,000 (51)	26,800 (56.5)	26,450 (63)	25,150 (68)	25,800 (71.5)	26,150 (74.5)	19,100 (76.5)	18,300 (78.5)	
35		18,550 (43.5)	19,250 (50)	18,800 (58.5)	18,700 (64)	19,900 (68.5)	20,500 (71.5)	18,100 (74)	17,650 (76.5)	
40	See Note 16	13,550 (34.5)	14,100 (43)	13,550 (53.5)	13,550 (60)	14,750 (65)	15,900 (69)	16,750 (72)	17,000 (74)	
45		9,890 (21.5)	10,350 (35)	9,800 (48.5)	9,810 (56)	10,950 (61.5)	12,150 (66)	13,300 (69)	14,000 (72)	
50			7,560 (24.5)	6,930 (42.5)	6,980 (52)	8,140 (58.5)	9,310 (63)	10,450 (66.5)	11,600 (69.5)	
60				2,870 (28)	2,970 (42.5)	4,110 (51)	5,260 (57)	6,400 (61.5)	7,540 (65)	
70						1,400 (42.5)	2,530 (50)	3,660 (56)	4,790 (60)	
80								1,690 (49.5)	2,810 (55)	
90									1,310 (49.5)	
0.1A (lbs.)	1,270	1,340	1,310	1,330	1,350	1,230	1,140	1,070	1,010	
	Minimum boom angle (deg.) for indicated length (no load)			24	35	40	43	45	47	
	Maximum boom length (ft.) at 0° boom angle (no load)				61					

### ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360°

NOTE: ( ) Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions. \*This capacity is based upon maximum boom angle.

_													
	Lifting Capacities On Outriggers 50% Extended - 360° At Zero Degree Boom Angle												
Γ	Boom	Main Boom Length in Feet											
	Angle	35	55	61									
	0°	27,400 (28.2)	8,500 (47.4)	5,850 (53.8)									

NOTE: () Reference radii in feet.

	Boom Extension Sequence in %											
Inner-Mid	0	50	50	75	100	100	100	100	100			
Mid	0	25	50	75	100	100	100	100	100			
Outer-Mid	0	0	0	0	0	25	50	75	100			
Fly	0	0	0	0	0	25	50	75	100			

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

BİGGE 🔶



A6-829-014849A

#### 31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 125 FT. MAIN BOOM ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	ENGTH	
Radius	#4021	#4023	#4041	#4043	
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET	
30	*11,500 (80)				
35	11,500 (78.5)				
40	11,500 (77)		6,950 (79.5)		
45	11,500 (75)	*8,000 (80)	6,780 (78.5)		
50	11,000 (73.5)	6,810 (78.5)	6,620 (77)		
60	8,070 (70)	6,490 (74.5)	6,290 (74)		
70	5,580 (66)	6,400 (70.5)	5,960 (71)	*3,700 (80)	
80	3,710 (62)	5,080 (66)	4,390 (67.5)	3,520 (76.5)	
90	2,100 (57.5)	3,130 (61.5)	2,940 (64.5)	3,400 (72.5)	
100		1,610 (56.5)	1,790 (60.5)	3,290 (68.5)	
110				2,430 (64)	
120				1,230 (59.5)	
0.1A (lbs.)	990	900	910	810	
Minimum boom angle (deg.) for indicated length (no load)	53	55	57	58	
Maximum boom length (ft.) at 0° boom angle (no load)	6	51	35		

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

1. All capacities above the bold line are based on structural strength of boom extension. Capacities correspond to SAE J1289 (Test Load = 1.25P + 0.1A). 0.1A represents one-tenth (0.10) of the total boom weight reduced to the boom point.

A6-829-014902A

- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths less than 125 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

BİGGE 🛕



## 31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 138 FT. MAIN BOOM ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	ENGTH	
Radius in	#4021	#4023	#4041	#4043	
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET	
35	9,500 (79.5)				
40	9,500 (78)		*5,500 (80)		
45	9,500 (76.5)		5,400 (79.5)		
50	9,500 (75)	*7,800 (80)	5,300 (78)		
60	8,220 (71.5)	6,740 (77)	5,100 (75.5)		
70	5,760 (68.5)	6,460 (73.5)	4,900 (72.5)	*3,600 (80)	
80	3,920 (64.5)	5,450 (69.5)	4,460 (69.5)	3,500 (77.5)	
90	2,480 (60.5)	3,690 (65.5)	3,030 (66.5)	3,400 (74)	
100	1,220 (56.5)	2,140 (61)	1,890 (63.5)	3,300 (70.5)	
110				2,280 (67)	
120				1,230 (63)	
0.1A (lbs.)	960	880	900	810	
Minimum boom angle (deg.) for indicated length (no load)	53	57	59	61	
Maximum boom length (ft.) at 0° boom angle (no load)	6	1	35		

NOTE: ( ) Boom angles are in degrees. A6-829-014901B

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension. Capacities correspond to SAE J1289 (Test Load = 1.25P + 0.1A). 0.1A represents one-tenth (0.10) of the total boom weight reduced to the boom point.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths between 125 ft. and fully extended with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.





# RATED LIFTING CAPACITIES IN POUNDS WITH COUNTERWEIGHT 35 FT. - 138 FT. BOOM

Radius					#8001						
in	Main Boom Length in Feet										
Feet	35	55	61	74	87	99	112	125	138		
10	86,700 (65.5)	71,750 (76)	69,000 (77.5)	*57,050 (80)							
12	65,550 (62)	55,400 (73.5)	53,700 (75.5)	49,100 (78.5)	*43,300 (80)						
15	46,750 (56)	40,050 (70)	39,200 (72.5)	36,150 (76)	33,550 (78.5)	*32,100 (80)					
20	29,400 (44.5)	25,650 (64.5)	25,350 (67.5)	23,500 (71.5)	21,950 (75)	22,400 (77.5)	*22,550 (80)	*20,150 (80)			
25	19,100 (29.5)	17,450 (58)	17,400 (62)	16,050 (67.5)	14,950 (71.5)	15,750 (74.5)	16,200 (77)	16,450 (79)	*16,550 (80)		
30		11,450 (51)	12,150 (56.5)	11,150 (63)	10,300 (68)	11,250 (71.5)	11,850 (74.5)	12,250 (76.5)	12,500 (78.5)		
35		7,350 (43.5)	7,950 (50)	7,540 (58.5)	6,980 (64)	8,020 (68.5)	8,730 (71.5)	9,230 (74)	9,580 (76.5)		
40	See Note 16	4,420 (34.5)	4,940 (43)	4,460 (53.5)	4,430 (60)	5,570 (65)	6,350 (69)	6,910 (72)	7,320 (74)		
45		2,240 (21.5)	2,690 (35)	2,150 (48.5)	2,160 (56)	3,290 (61.5)	4,410 (66)	5,080 (69)	5,530 (72)		
50						1,500 (58.5)	2,590 (63)	3,600 (66.5)	4,080 (69.5)		
60									1,880 (65)		
0.1A (lbs.)	1,270	1,340	1,310	1,330	1,350	1,230	1,140	1,070	1,010		
	Minimum boom angle (deg.) for indicated length (no load)		25	44	53	56	59	62	62		
	Maximum boom length (ft.) at 0 degree boom angle (no load)					55					

# ON OUTRIGGERS 0% EXTENDED (10' 4" SPREAD) - 360°

NOTE: ( ) Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

Lifting Capacities On Outriggers 0% Extended - 360° At Zero Degree Boom Angle												
Boom		Main Boom Length in Feet										
Angle	35	55										
0°	14,950 (28.2)	1,390 (47.4)										
NOTE: ( ) Re	ference radii	i in feet.						A6-8	29-014851/			
			Воо	m Extensior	n Sequence	in %						
Inner-Mid	0	50	50	75	100	100	100	100	100			
Mid	0	25	50	75	100	100	100	100	100			
Outer-Mid	0	0	0	0	0	25	50	75	100			
Fly	0	0	0	0	0	25	50	75	100			

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Bigge 🗎



## RATED LIFTING CAPACITIES ON RUBBER WITH COUNTERWEIGHT 33.25x29 GENERAL TIRES

Radius			#9005					
in		Main E	Boom Length	in Feet				
Feet	35	55	61	74	87			
10	45,200 (65.5)	40,850 (76)						
12	43,100 (62)	40,850 (73.5)						
15	29,400 (56)	29,400 (70)	29,400 (72.5)	29,400 (76)				
20	17,750 (44.5)	17,750 (64.5)	17,750 (67.5)	17,750 (71.5)	17,750 (75)			
25	11,300 (29.5)	11,300 (58)	11,300 (62)	11,300 (67.5)	11,300 (71.5)			
30		7,300 (51)	7,300 (56.5)	7,300 (63)	7,300 (68)			
35		4,520 (43.5)	4,520 (50)	4,520 (58.5)	4,520 (64)			
40		2,290 (34.5)	2,290 (43)	2,290 (53.5)	2,290 (60)			
Minimum boom angl indicated length (	31	40	50	58				
	Maximum boom length (ft.) at 0 degree boom angle (no load)			35				

#### STATIONARY CAPACITIES - 360°

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.

Capacities at Zero Degree Boom Angle								
Boom		Main Boom Length in Feet						
Angle	35	0.	÷					
0°	9,350 (28.2)	9						
NOTE: () Reference	radii in foot			46	829-015116			

NOTE: () Reference radii in feet.

A0-029-013110

- 1. Capacities do not exceed 75% of tipping loads as determined by test in accordance with SAE J765.
- Capacities are applicable to machines equipped with 33.25x29 (32 ply) General tires at 65 psi cold inflation pressure.
   Defined Arc Over front includes 6° on either side of longitudinal centerline of machine.
- 4. Capacities appearing above the bold line are based on structural strength and tipping should not be relied upon as a capacity limitation.
- 5. Capacities are applicable only with machine on firm level surface.
- 6. On rubber lifting with boom extensions not permitted.
- 7. For pick and carry operation, boom must be centered over front of machine, mechanical swing lock engaged and load restrained from swinging. When handling loads in the structural range with capacities close to maximum ratings, travel should be reduced to creep speeds.
- 8. Axle lockouts must be functioning when lifting on rubber.
- 9. All lifting depends on proper tire inflation, capacity and condition. Capacities must be reduced for lower tire inflation pressures. See lifting capacity chart for tire used. Damaged tires are hazardous to safe operation of crane.
- 10. Creep not over 200 ft. of movement in any 30 minute period and not exceeding 1 mph.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.





# RATED LIFTING CAPACITIES ON RUBBER (cont'd.)

#### PICK & CARRY CAPACITIES - UP TO 2.5 MPH BOOM CENTERED OVER FRONT (SEE NOTE 7)

Radius			#9006		
in		Main B	oom Length	in Feet	
Feet	35	55	61	74	87
10	45,200 (65.5)	29,150 (76)			
12	45,200 (62)	29,150 (73.5)			
15	37,250 (56)	29,150 (70)	26,900 (72.5)	18,150 (76)	
20	30,600 (44.5)	29,150 (64.5)	26,900 (67.5)	18,150 (71.5)	12,400 (75)
25	20,250 (29.5)	20,250 (58)	20,250 (62)	18,150 (67.5)	12,400 (71.5)
30		14,400 (51)	14,400 (56.5)	14,440 (63)	12,400 (68)
35		10,650 (43.5)	10,650 (50)	10,650 (58.5)	10,650 (64)
40		7,940 (34.5)	7,940 (43)	7,940 (53.5)	7,940 (60)
45		5,920 (21.5)	5,920 (35)	5,920 (48.5)	5,920 (56)
50			4,380 (24.5)	4,380 (42.5)	4,380 (52)
60				2,160 (28)	2,160 (42.5)
Minimum	boom angle	(deg.) for ind	icated length	i (no load)	40
Maximum t	boom length (	ft.) at 0 degr	ee boom ang	le (no load)	74

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.

Capacities at Zero Degree Boom Angle								
Boom Angle	Main Boom Length in Feet							
	35	55	61	74				
0°	16,500 (28.2)	5,140 (47.4)	3,430 (53.8)	1,110 (66.6)				

NOTE: () Reference radii in feet.

A6-829-015118

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Bigge 🛕



## RATED LIFTING CAPACITIES ON RUBBER WITH COUNTERWEIGHT 33.25Rx29 GENERAL TIRES

#### STATIONARY CAPACITIES DEFINED ARC OVER FRONT (SEE NOTE 3)

Radius		#9005								
in		Main B	oom Length	in Feet						
Feet	35	55	61	74	87					
10	45,200 (65.5)	40,850 (76)								
12	45,200 (62)	40,850 (73.5)	40,850 (75.5)							
15	45,200 (56)	40,850 (70)	40,850 (72.5)	34,400 (76)						
20	40,850 (44.5)	40,850 (64.5)	40,850 (67.5)	34,400 (71.5)	24,050 (75)					
25	27,000 (29.5)	27,100 (58)	27,100 (62)	27,100 (67.5)	24,050 (71.5)					
30		19,200 (51)	19,200 (56.5)	19,200 (63)	19,200 (68)					
35		14,200 (43.5)	14,200 (50)	14,200 (58.5)	14,200 (64)					
40		10,550 (34.5)	10,550 (43)	10,550 (53.5)	10,550 (60)					
45		7,905 (21.5)	7,905 (35)	7,905 (48.5)	7,905 (56)					
50			5,840 (24.5)	5,840 (42.5)	5,840 (52)					
60				2,880 (28)	2,880 (42.5)					
Minimum	boom angle	(deg.) for ind	licated length	n (no load)	40					
Maximum t	boom length (	ft.) at 0 degr	ee boom ang	le (no load)	74					

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.

Capacities at Zero Degree Boom Angle									
Boom	Main Boom Length in Feet								
Angle	35	55	61	74					
0°	22,000 (28.2)	6,860 (47.4)	4,570 (53.8)	1,480 (66.6)					

NOTE: () Reference radii in feet.

A6-829-015117

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Bigge 🛕



# RATED LIFTING CAPACITIES IN POUNDS WITHOUT COUNTERWEIGHT 35 FT. - 138 FT. BOOM

Radius					#0801				
in				Main Bo	oom Length	in Feet			
Feet	35	55	61	74	87	99	112	125	138
10	122,000 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)					
12	104,500 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)				
15	85,800 (56)	79,100 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)			
20	63,400 (44.5)	62,150 (64.5)	59,850 (67.5)	44,350 (71.5)	39,550 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)	
25	46,000 (29.5)	44,900 (58)	45,200 (62)	38,750 (67.5)	33,800 (71.5)	32,100 (74.5)	30,050 (77)	20,150 (79)	*19,000 (80)
30		34,100 (51)	34,400 (56.5)	34,150 (63)	29,200 (68)	30,200 (71.5)	27,350 (74.5)	19,100 (76.5)	18,300 (78.5)
35		26,750 (43.5)	27,000 (50)	26,800 (58.5)	25,800 (64)	26,600 (68.5)	24,300 (71.5)	18,100 (74)	17,650 (76.5)
40		21,350 (34.5)	21,650 (43)	21,450 (53.5)	21,300 (60)	22,600 (65)	21,600 (69)	17,250 (72)	17,000 (74)
45	See Note 16	16,200 (21.5)	16,750 (35)	16,100 (48.5)	16,150 (56)	17,400 (61.5)	18,700 (66)	16,450 (69)	16,350 (72)
50			12,900 (24.5)	12,200 (42.5)	12,250 (52)	13,500 (58.5)	14,750 (63)	15,750 (66.5)	15,700 (69.5)
60				6,830 (28)	6,950 (42.5)	8,140 (51)	9,360 (57)	10,550 (61.5)	11,800 (65)
70					3,450 (30)	4,620 (42.5)	5,810 (50)	7,020 (56)	8,230 (60)
80						2,080 (32)	3,310 (42.5)	4,490 (49.5)	5,690 (55)
90							1,400 (33.5)	2,610 (43)	3,790 (49.5)
100								1,160 (35)	2,330 (43)
110					N N				1,170 (36)
Minimum boom angle (deg.) for indicated length (no load)					22	27	31	33	34
Maximum b	boom length	(ft.) at 0° bo	oom angle (	no load)			74		

### ON OUTRIGGERS FULLY EXTENDED - 360°

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

	Lifting Capacities On Outriggers Fully Extended - 360° At Zero Degree Boom Angle								
Boom	Main Boom Length in Feet								
Angle	35	55	61	74					
0°	27,400	12,850	10,400	4,370					
0	(28.2)	(47.4)	(53.8)	(66.6)					
NOTE: ( ) F	NOTE: () Reference radii in feet. A6-829-014848A								

Boom Extension Sequence in %										
Inner-Mid	0	50	50	75	100	100	100	100	100	
Mid	0	25	50	75	100	100	100	100	100	
Outer-Mid	0	0	0	0	0	25	50	75	100	
Fly	0	0	0	0	0	25	50	75	100	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

BİGGE 🔶

🛕 BİGGE

# 31 FT. - 56 FT. FOLDING BOOM EXTENSION WITHOUT COUNTERWEIGHT **USING 125 FT. MAIN BOOM** ON OUTRIGGERS FULLY EXTENDED - 360°

	31 FT. L	ENGTH	56 FT. L	ENGTH
Radius	#0821	#0823	#0841	#0843
in Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET
30	*11,500 (80)			
35	11,500 (78.5)			
40	11,500 (77)		6,950 (79.5)	
45	11,500 (75)	*8,000 (80)	6,780 (78.5)	
50	11,000 (73.5)	6,810 (78.5)	6,620 (77)	
60	10,050 (70)	6,490 (74.5)	6,290 (74)	
70	9,220 (66)	6,400 (70.5)	5,960 (71)	*3,700 (80)
80	6,670 (62)	6,350 (66)	5,640 (67.5)	3,520 (76.5)
90	4,650 (57.5)	5,710 (61.5)	5,260 (64.5)	3,400 (72.5)
100	3,080 (53)	3,860 (56.5)	4,270 (60.5)	3,290 (68.5)
110	1,830 (47.5)	2,380 (51)	2,900 (56.5)	3,190 (64)
120			1,790 (52)	3,110 (59.5)
130				1,920 (54)
Minimum boom angle (deg.) for indicated length (no load)	42	46	48	51
Maximum boom length (ft.) at 0 degree boom angle (no load)	0.7	4	6	51

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths less than 125 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane





### 31 FT. - 56 FT. FOLDING BOOM EXTENSION WITHOUT COUNTERWEIGHT USING 138 FT. MAIN BOOM ON OUTRIGGERS FULLY EXTENDED - 360°

ON OUTRIGGERS FULLY EXTENDED - 360°								
<b>D</b> "	31 FT. L	.ENGTH	56 FT. L	.ENGTH				
Radius in	#0821	#0823	#0841	#0843				
Feet	1.5°	45°	1.5°	45°				
	OFFSET	OFFSET	OFFSET	OFFSET				
35	9,500							
	(79.5)							
40	9,500		*5,500					
	(78)		(80)					
45	9,500 (76 5)		5,400 (70,5)					
	(76.5)	*7.000	(79.5)					
50	9,500 (75)	*7,800 (80)	5,300 (78)					
	9,110	6,740	5,100					
60	(71.5)	(77)	(75.5)					
	8,450	6,460	4,900	*3,600				
70	(68.5)	(73.5)	(72.5)	(80)				
80	7,210	6,350	4,700	3,500				
00	(64.5)	(69.5)	(69.5)	(77.5)				
90	5,100	6,280	4,500	3,400				
	(60.5)	(65.5)	(66.5)	(74)				
100	3,470	4,420	4,300	3,300				
	(56.5)	(61)	(63.5)	(70.5)				
110	2,170	2,910	3,210	3,200				
	(52)	(56.5)	(59.5)	(67)				
120	1,120 (47)	1,680 (51)	2,170 (56)	3,090 (63)				
	(+7)	(31)	1,260	2,040				
130			(52)	(58.5)				
			(/	1,160				
140				(53.5)				
Minimum boom angle								
(deg.) for indicated	46	49	50	52				
length (no load)								
Maximum boom			_					
length (ft.) at 0° boom angle (no load)		4	61					
	ara in doare		A.C. 04	0.0140004				
NOTE: () Boom angles are in degrees. A6-829-014899A								

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths between 125 ft. and fully extended with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load charl, operating instructions and other instructional plates must be read and understood prior to operating the crane.

BİGGE 



# RATED LIFTING CAPACITIES IN POUNDS WITHOUT COUNTERWEIGHT 35 FT. - 138 FT. BOOM

ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360°
---

Radius	#4801											
in				Main E	Boom Length	in Feet						
Feet	35	55	61	74	87	99	112	125	138			
10	112,500 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)								
12	99,350 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)							
15	84,050 (56)	73,500 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)						
20	50,150 (44.5)	44,350 (64.5)	43,550 (67.5)	40,400 (71.5)	37,800 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)				
25	30,950 (29.5)	29,150 (58)	29,650 (62)	27,650 (67.5)	26,000 (71.5)	26,550 (74.5)	26,750 (77)	20,150 (79)	*19,000 (80)			
30		19,250 (51)	20,050 (56.5)	19,700 (63)	18,650 (68)	19,500 (71.5)	19,950 (74.5)	19,100 (76.5)	18,300 (78.5)			
35		13,100 (43.5)	13,800 (50)	13,300 (58.5)	13,200 (64)	14,450 (68.5)	15,250 (71.5)	15,700 (74)	15,950 (76.5)			
40	See Note 16	8,950 (34.5)	9,520 (43)	8,990 (53.5)	8,960 (60)	10,150 (65)	11,300 (69)	12,300 (72)	12,650 (74)			
45		5,930 (21.5)	6,420 (35)	5,840 (48.5)	5,850 (56)	7,030 (61.5)	8,200 (66)	9,380 (69)	10,100 (72)			
50			4,070 (24.5)	3,450 (42.5)	3,490 (52)	4,660 (58.5)	5,820 (63)	6,980 (66.5)	8,130 (69.5)			
60						1,310 (51)	2,450 (57)	3,590 (61.5)	4,730 (65)			
70							2	1,310 (56)	2,440 (60)			
0.1A (lbs.)	1,270	1,340	1,310	1,330	1,350	1,230	1,140	1,070	1,010			
Minimum boo load)	om angle (de	g.) for indicate	ed length (no	30	43	48	51	54	56			
	Maximum boom length (ft.) at 0 degree boom angle (no load)				<b>V</b> -	6	51					

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

	Lifting Capacities On Outriggers 50% Extended - 360° At Zero Degree Boom Angle											
Boom		Main Boom Length in Feet										
Angle	35	55	61									
0°	23,900 (28.2)	4,780 (47.4)	2,660 (53.8)									

NOTE: ( ) Reference radii in feet.

	Boom Extension Sequence in %											
Inner-Mid	0	50	50	75	100	100	100	100	100			
Mid	0	25	50	75	100	100	100	100	100			
Outer-Mid	0	0	0	0	0	25	50	75	100			
Fly	0	0	0	0	0	25	50	75	100			

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

BİGGE 🛕

🛕 Bigge

A6-829-014850A

LIFTING OFF MAIN BOOM NOSE (35 FT 138 FT. BOOM) WITH:								
25 ft. Fly Section (Stowed on Boom Base Section))	440 lbs.							
31 ft. Fixed Extension (Stowed on Boom Base Section))	1,110 lbs.							
31 ft. Fixed Extension (Erected)	4,830 lbs.							
31-56 ft. Folding Extension (Stowed on Boom Base Section)	1,550 lbs.							
31-56 ft. Folding Extension (Erected)	10,700 lbs.							
LIFTING OFF 31 FT. BOOM EXTENSION WITH	:							
25 ft. Fly Section (Stowed on Boom Base Section)	440 lbs.							
25 ft. Fly Section (Erected)	Not Permitted							
25 ft. Fly Section (Stowed on 31 ft. Extension)	Not Permitted							
*Deduction of main became consolition								

\*Reduction of main boom capacities

AUXILIARY BOOM NOSE	127 lbs.
HOOKBLOCKS and HEADACHE BALLS:	
75 Ton, 6 Sheave w/cheekplates	2,299 lbs.+
75 Ton, 6 Sheave w/o cheekplates	1,711 lbs.+
45 Ton, 3 Sheave w/cheekplates	1,095 lbs.+
45 Ton, 3 Sheave w/o cheekplates	830 lbs.+
15 Ton, 1 Sheave	423 lbs.+
10 Ton Headache Ball	560 lbs.+

+Refer to rating plate for actual weight.


When lifting over swingaway and/or jib combinations, deduct total weight of all load handling devices reeved over main boom nose directly from swingaway or jib capacity.

NOTE: All load handling devices and boom attachments are considered part of the load and suitable allowances MUST BE MADE for their combined weights. Weights are for Grove furnished equipment.

TIRE INFLATION - PSI (BAR)										
TRA	LIFTING SERVICE , GENERAL TRAVEL AND EXTENDED TRAVEL									
CODE	STATIC, CREEP & 2.5 MPH (4.0 KPH)									
	75 (5.2)									
E-3	65 (4.5) (SEE OPERATOR'S MANUAL FOR EXTENDED ROADING)									
	TRA CODE									

## LINE PULLS AND REEVING INFORMATION


HOISTS	CABLE SPECS.	PERMISSIBLE LINE PULLS	NOMINAL CABLE LENGTH
Main & Aux. Model 30	3/4" (19 mm) 18x19Class or 35x7 Rotation Resistant Min. Breaking Str. 64,600 lbs.	12,920 lbs.	620 ft.
Main & Aux. Model 30	3/4" (19 mm) 6x37 Class EIPS IWRC Special Flexible Min. Breaking Str. 58,800 lbs.	12,920 lbs.	620 ft.

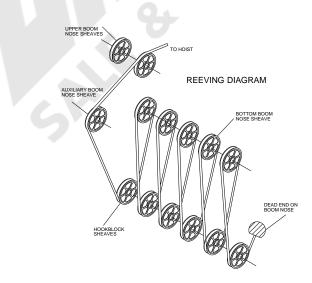

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE GRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.


Bigge 🛕




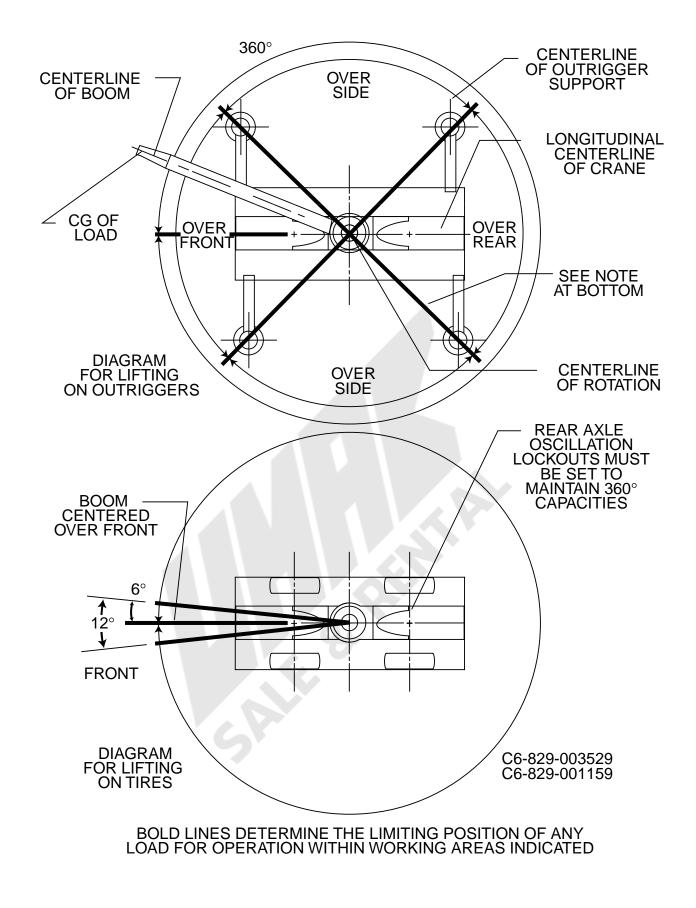






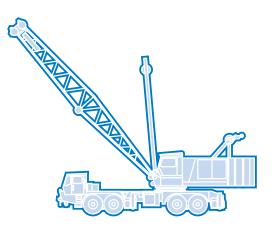


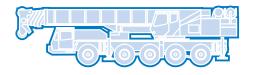

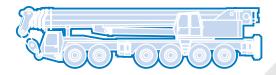





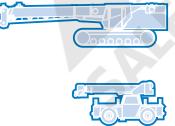

### Bigge Crane and Rigging Co.

10700 Bigge Avenue San Leandro, CA 94577 Phone: (888) 337-BIGGE or (510) 638-8100 Fax: (510) 639-4053 Email: info@bigge.com Web site: www.bigge.com



#### Grove Worldwide - World Headquarters 1565 Buchanan Trail East P.O. Box 21 Shady Grove, Pennsylvania 17256,

U.S.A. Tel: [Int + 1] (717) 597-8121 Fax: [Int + 1] (717) 597-4062 Western Hemisphere, Asia/Pacific

#### Grove Europe Limited\*

Sunderland SR4 6TT, England Tel: [Int + 44] 191 565-6281 Fax: [Int + 44] 191 564-0442 Europe, Africa, Middle East

#### **Deutsche Grove GmbH**

Sales and Service Helmholtzstrasse 12, Postfach 5026 D-40750 Langenfeld, Germany Tel: [Int + 49] (2173) 8909-0 Fax: [Int + 49] (2173) 8909-30

#### Wilhelmshaven Works

Industriegelande West, Postfach 1853 D-26358 Wilhelmshaven, Germany Tel: [Int + 49] (4421) 294-0 Fax: [Int + 49] (4421) 294-301

#### Grove Asia/Pacific - Regional Office

171 Chin Swee Road #10-09 San Centre Singapore 0316 Tel: [Int + 65] 536-6112 Fax: [Int + 65] 536-6119 Asia/Pacific, Near East

\*Grove Europe Limited, Registered in England, Number 1845128, Registered office, Crown Works, Pallion, Sunderland, Tyne & Wear, England SR4 6TT

Grove China - Representative Office

Beijing Hotel Room 6074 No. 33 East Chang An Avenue Beijing, 100004, China Tel: [Int + 86] (10) 513-7766 Fax: [Int + 86] (10) 513-7307

#### Grove Middle East

P.O. Box 290 Dubai, United Arab Emirates Tel: (Int + 971) (4) 378400 Fax:(Int + 971) (4) 373660

#### Lifetime Customer Support

Western Hemisphere, Asia/Pacific 1086 Wayne Avenue Chambersburg, Pennsylvania USA Tel: [Int + 1] (717) 263-5100 Fax: [Int + 1] (717) 267-0404

Europe, Africa, Middle East Sunderland SR4 6TT, England Tel: [Int + 44] 191 565-6281 Parts Fax: [Int + 44] 191 510-9242 Service Fax: [Int + 44] 191 510-9560

Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories and may not include all standard equipment.

Distributed By:



Form No.: RT875BXL Part No.: 3-1345 899-6M Printed in U.S.A.









# ROUGH TERRAIN HYDRAULIC CRANE



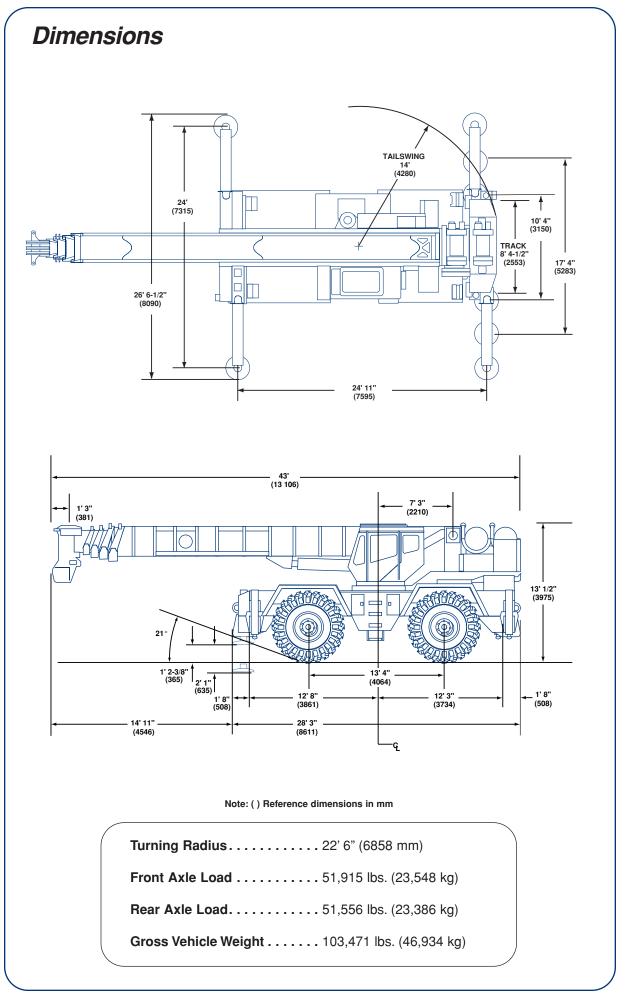

# Working Range

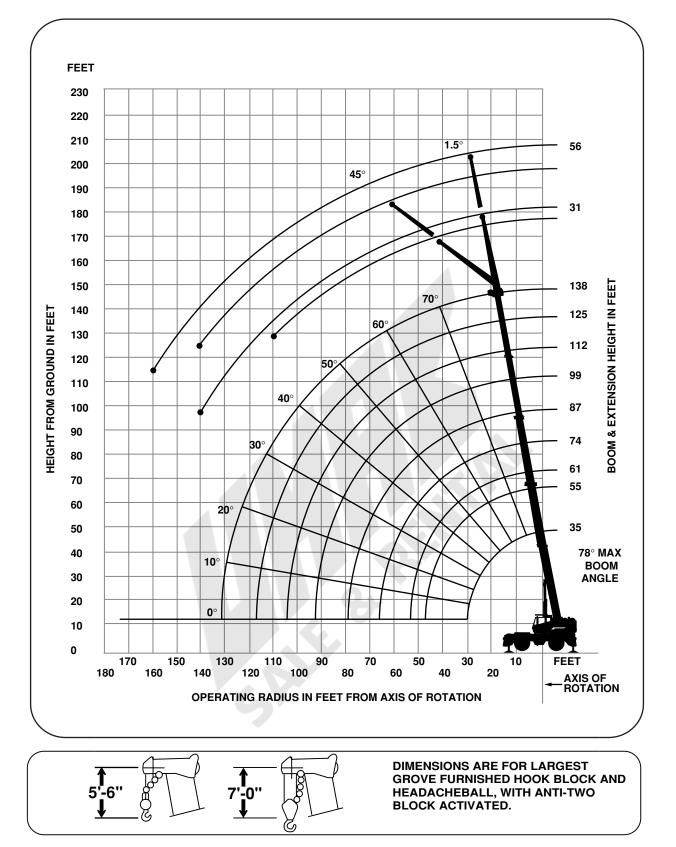

# Superstructure specifications

# Boom

35 ft. - 138 ft. (10.6 m - 42 m) five-section full power boom. Maximum Tip Height: 148 ft. (45.1 m).

# **Folding Lattice Extension**

31 ft. - 56 ft. (9.4 m - 17 m) bi-fold lattice swingaway extension offsettable at  $1.5^{\circ}$  or  $45^{\circ}$  Stows alongside base section. Maximum Tip Height: 204 ft. (62.1 m).

# \*Optional Lattice Extension

31 ft. (9.4 m) lattice swingaway extension. Offsettable at  $1.5^{\circ}$  or  $45^{\circ}$ . Stows alongside base boom section. Maximum Tip Height: 179 ft. (54.5 m).

# **Boom Nose**

Five Nylatron sheaves mounted on heavy duty tapered roller bearings with removable pin-type rope guards. Quick reeving type boom nose. A removable auxiliary boom nose with removable pin type rope guard.

# **Boom Elevation**

One double acting hydraulic cylinder with integral holding valve provides elevation from -3° to 78°.

# Load Moment & Anti-Two Block System

Standard load moment and anti-two block system with audio-visual warning and control lever lockout. These systems provide electronic display of boom angle, length, radius, tip height, relative load moment, maximum permissible load and load indication and warning of impending twoblock condition.

# Cab

Full vision, all galvanealed steel fabricated with acoustical lining and tinted safety glass throughout. Deluxe seat with armrest mounted hydraulic single axis controllers. Dash panel incorporates gauges for engine functions. Other standard features include: skylight screen, hydraulic oil cab heater/defroster, telescoping tilt wheel, sliding side and rear windows, opening skylight, electric windshield wash-wipe, electric skylight wipers, fire extinguisher, seat belt, ashtray and level indicator.

# Swing

Planetary swing with foot applied multi-disc wet brake. Spring applied, hydraulically released swing brake, 360° positive swing lock (N.Y.C. style) and 1 position, mechanical house lock, operated from cab. Maximum speed: 2.0 RPM.

# Counterweight

Removable: 8,500 lbs. (3855 kg). 2,155 lbs. (977 kg) slab I.P.O. auxiliary hoist.

# Hydraulic System

Seven main pumps with a combined capacity 199.2 GPM (754 LPM). Maximum operating pressure 3500 psi (241 bar). Three individual valve banks. Return line type filter with full flow by-pass protection and service indicator. Replaceable cartridge with micron filtration rating of 5/12/16. 200 gallons (757 L) reservoir. Remote mounted oil cooler with thermostatically controlled hydraulic motor driven fan/air to oil. System pressure test panel with quick release type fittings for each circuit.

## Hoist Specifications Main and Auxiliary Hoist

Planetary reduction with automatic spring applied multi-disc brake. Electronic hoist drum rotation indicator, hoist drum cable followers and wire rope.

(7607 kg)

Maximum Single Line Pull: 16,969 lbs.

	(7097 Kg)
Maximum Single Line Speed:	385 FPM (117 m/min)
Maximum Permissible Line Pull:	12,920 lbs. (5860 kg)
Rope Diameter:	3/4 in. (19 mm)
Rope Length:	620 ft. (190 m)
Maximum Rope Stowage:	1,163 ft. (354.5 m)

# **Carrier specifications**

# Chassis

Box section frame fabricated from high-strength, low alloy steel. Integral outrigger housings and front/rear towing and tie down lugs.

# **Outrigger System**

Four hydraulic telescoping single-stage double box beam outriggers with inverted jacks and integral holding valves. Three position setting. All steel fabricated quick release type outrigger floats, 30.5" (77.5 mm) diameter. Maximum outrigger pad load: 106,820 lbs. (48,453 kg).

# **Outrigger Controls**

Controls and crane level indicator located in cab.

# Engine

Cummins 6CTA 8.3 diesel, six cylinders, turbocharged, 250 bhp (186 kW) (Gross) @ 2,200 RPM. Maximum torque: 794 ft. lbs. (1077 Nm) @ 1,500 RPM.

# \*Optional Engine

Caterpillar 3126TA diesel, six cylinders, turbocharged, 250 bhp (186 kW) (Gross) @ 2,500 RPM. Maximum torque: 686 ft. lbs. (930 Nm) @ 1,650 RPM.

# **Fuel Tank Capacity**

80 gallons (303 L)

# Transmission

Full powershift with 6 forward and 6 reverse speeds. Rear axle disconnect for 4 x 2 travel.

## **Electrical System**

Two 12 V - maintenance free batteries. 24 V starting and lighting.

## Drive

4 x 4.

## Steering

Fully independent power steering: Front: Full hydraulic steering wheel controlled. Rear: Full hydraulic hand lever controlled. Provides infinite variations of 4 main steering modes: front only, rear only, crab and coordinated. Rear steer indicating gauge.

## **Axles**

Front: Drive steer with differential and planetary reduction hubs rigid mounted to frame. Rear: Drive/steer with differential and planetary reduction hubs pivot mounted to frame.

# **Oscillation Lockouts**

Automatic full hydraulic lockouts on rear axle permits oscillation only with boom centered over the front.

## **Brakes**

Full air split circuit operating on all wheels. Spring-applied, air released front and rear axles.

# Tires

Std. 33.25 x 29 - 32PR earthmover type. \*Optional: 33.25R29 radial.

# Lights

Full lighting including turn indicators, head, tail, brake, and hazard warning lights.

# **Maximum Speed**

25 MPH (40 kph).

# Gradeability (Theoretical)

87% based on 102,840 lbs. (46 648 kg) GVW.33.25 x 29 tires, pumps disengaged, 138 ft. (42 m) boom, plus 31 ft. (9.4 m) swingaway.

# Miscellaneous Standard Equipment

Full width steel fenders, dual rear view mirrors, hookblock tiedown, electronic back-up alarm, light package, front stowage well, tachometer/hourmeter, cold start aid (less canister), rear wheel position indicator, hydraulic cab heater, hoist mirrors, engine distress A/V warning system, tire inflation kit.

# \*Optional Equipment

- \* **Popular Option Package** cab controlled cross axle differential locks front and rear.
- \* Auxiliary Lighting Package cab mounted remote controlled worklights, cab mounted amber flashing light, hoist mounted worklight, and dual base boom mounted floodlights.
- Convenience Package includes immersion type engine block heater (120 V, 1500 watt), in-cab LMI light bar, and auto-grease system for turntable.
- \* Air Conditioning
- \* Rear pintle hook
- \* Additional hydraulic oil cooler

\*Denotes optional equipment

# RATED LIFTING CAPACITIES IN POUNDS WITH COUNTERWEIGHT 35 FT. - 138 FT. BOOM

# ON OUTRIGGERS FULLY EXTENDED - 360°

Radius	#0001											
in				Main E	Boom Length	in Feet						
Feet	35	55	61	74	87	99	112	125	138			
10	+150,000 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)								
12	106,500 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)							
15	90,050 (56)	79,100 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)						
20	68,300 (44.5)	67,350 (64.5)	59,850 (67.5)	44,350 (71.5)	39,550 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)				
25	52,250 (29.5)	51,150 (58)	51,450 (62)	38,750 (67.5)	33,800 (71.5)	32,100 (74.5)	30,050 (77)	20,150 (79)	*19,000 (80)			
30		39,200 (51)	39,450 (56.5)	34,200 (63)	29,200 (68)	30,200 (71.5)	27,350 (74.5)	19,100 (76.5)	18,300 (78.5)			
35		31,000 (43.5)	31,300 (50)	29,050 (58.5)	25,800 (64)	26,600 (68.5)	24,300 (71.5)	18,100 (74)	17,650 (76.5)			
40		25,050 (34.5)	25,350 (43)	25,150 (53.5)	22,900 (60)	23,450 (65)	21,600 (69)	17,250 (72)	17,000 (74)			
45		20,500 (21.5)	20,800 (35)	20,600 (48.5)	20,000 (56)	20,450 (61.5)	19,250 (66)	16,450 (69)	16,350 (72)			
50			17,250 (24.5)	16,850 (42.5)	16,900 (52)	17,900 (58.5)	16,900 (63)	15,750 (66.5)	15,700 (69.5)			
60				10,500 (28)	10,600 (42.5)	11,800 (51)	13,000 (57)	13,100 (61.5)	13,300 (65)			
70					6,500 (30)	7,670 (42.5)	8,860 (50)	10,050 (56)	11,050 (60)			
80						4,710 (32)	5,910 (42.5)	7,090 (49.5)	8,290 (55)			
90						2,390 (15.5)	3,690 (33.5)	4,880 (43)	6,060 (49.5)			
100							1,910 (21)	3,170 (35)	4,340 (43)			
110								1,810 (24.5)	2,970 (36)			
120									1,860 (27)			
		Minimum boo	m angle (deg.	) for indicated	length (no loa	ad)		16	18			

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

+12 parts line required to lift this capacity (using aux. boom nose). Refer to reeving diagram.

	Lifting Capacities On Outriggers Fully Extended - 360° At Zero Degree Boom Angle												
Boom	m Main Boom Length in Feet												
Angle	35	55	61	74	87	99	112						
0°	27,400 (28.2)	12,850 (47.4)	10,400 (53.8)	6,290 (66.6)	3,380 (79.4)	1,970 (92.2)	1,170 (105)						
NOTE · ( ) F	Reference radi	ii in feet				_	-	A6-	829-016119A				

NOTE: () Reference radii in feet.

	Boom Extension Sequence in %											
Inner-Mid	0	50	50	75	100	100	100	100	100			
Mid	0	25	50	75	100	100	100	100	100			
Outer-Mid	0	0	0	0	0	25	50	75	100			
Fly	0	0	0	0	0	25	50	75	100			

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

# 31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 125 FT. MAIN BOOM ON OUTRIGGERS FULLY EXTENDED - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	ENGTH
Radius in	#0021	#0023	#0041	#0043
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET
30	*11,500 (80)			
35	11,500 (78.5)			
40	11,500 (77)		6,950 (79.5)	
45	11,500 (75)	*8,000 (80)	6,780 (78.5)	
50	11,000 (73.5)	6,810 (78.5)	6,620 (77)	
60	10,050 (70)	6,490 (74.5)	6,290 (74)	
70	9,220 (66)	6,400 (70.5)	5,960 (71)	*3,700 (80)
80	8,440 (62)	6,350 (66)	5,640 (67.5)	3,520 (76.5)
90	6,900 (57.5)	6,340 (61.5)	5,260 (64.5)	3,400 (72.5)
100	5,090 (53)	5,860 (56.5)	4,980 (60.5)	3,290 (68.5)
110	3,640 (47.5)	4,180 (51)	4,630 (56.5)	3,190 (64)
120	2,450 (41.5)		3,420 (52)	3,110 (59.5)
130	1,450 (34.5)		2,360 (47.5)	3,040 (54)
140			1,460 (42.5)	
Minimum boom angle (deg.) for indicated length (no load)	33	45	39	49
Maximum boom length (ft.) at 0 degree boom angle (no load)				4

NOTE: ( ) Boom angles are in degrees.

A6-829-014898A

#LMI operating code. Refer to LMI manual for instructions. \*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths less than 125 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

# 31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 138 FT. MAIN BOOM ON OUTRIGGERS FULLY EXTENDED - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	.ENGTH
Radius in	#0021	#0023	#0041	#0043
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET
35	9,500 (79.5)			
40	9,500 (78)		*5,500 (80)	
45	9,500 (76.5)		5,400 (79.5)	
50	9,500 (75)	*7,800 (80)	5,300 (78)	
60	9,110 (71.5)	6,740 (77)	5,100 (75.5)	
70	8,450 (68.5)	6,460 (73.5)	4,900 (72.5)	*3,600 (80)
80	7,550 (64.5)	6,350 (69.5)	4,700 (69.5)	3,500 (77.5)
90	6,990 (60.5)	6,280 (65.5)	4,500 (66.5)	3,400 (74)
100	5,480 (56.5)	6,220 (61)	4,300 (63.5)	3,300 (70.5)
110	3,980 (52)	4,710 (56.5)	4,100 (59.5)	3,200 (67)
120	2,750 (47)	3,320 (51)	3,650 (56)	3,100 (63)
130	1,740 (41.5)		2,690 (52)	3,000 (58.5)
140			1,870 (47.5)	2,540 (53.5)
150			1,130 (42.5)	
Minimum boom angle (deg.) for indicated length (no load)	37	45	42	47
Maximum boom length (ft.) at 0 degree boom angle (no load)	8	7	7	4

NOTE: ( ) Boom angles are in degrees.

A6-829-014897

#LMI operating code. Refer to LMI manual for instructions. \*This capacity is based upon maximum boom angle.

1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.

2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.

- 3. For main boom lengths between 125 ft. and fully extended with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

# RATED LIFTING CAPACITIES IN POUNDS WITH COUNTERWEIGHT 35 FT. - 138 FT. BOOM

# ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360°

Radius					#4001				
in				Main B	oom Length	in Feet			
Feet	35	55	61	74	87	99	112	125	138
10	115,000 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)					
12	101,500 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)				
15	86,150 (56)	79,100 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)			
20	62,850 (44.5)	56,100 (64.5)	55,000 (67.5)	44,350 (71.5)	39,550 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)	
25	39,750 (29.5)	37,950 (58)	38,300 (62)	35,950 (67.5)	33,800 (71.5)	32,100 (74.5)	30,050 (77)	20,150 (79)	*19,000 (80)
30		26,000 (51)	26,800 (56.5)	26,450 (63)	25,150 (68)	25,800 (71.5)	26,150 (74.5)	19,100 (76.5)	18,300 (78.5)
35		18,550 (43.5)	19,250 (50)	18,800 (58.5)	18,700 (64)	19,900 (68.5)	20,500 (71.5)	18,100 (74)	17,650 (76.5)
40		13,550 (34.5)	14,100 (43)	13,550 (53.5)	13,550 (60)	14,750 (65)	15,900 (69)	16,750 (72)	17,000 (74)
45		9,890 (21.5)	10,350 (35)	9,800 (48.5)	9,810 (56)	10,950 (61.5)	12,150 (66)	13,300 (69)	14,000 (72)
50			7,560 (24.5)	6,930 (42.5)	6,980 (52)	8,140 (58.5)	9,310 (63)	10,450 (66.5)	11,600 (69.5)
60				2,870 (28)	2,970 (42.5)	4,110 (51)	5,260 (57)	6,400 (61.5)	7,540 (65)
70						1,400 (42.5)	2,530 (50)	3,660 (56)	4,790 (60)
80							2	1,690 (49.5)	2,810 (55)
90									1,310 (49.5)
0.1A (lbs.)	1,270	1,340	1,310	1,330	1,350	1,230	1,140	1,070	1,010
Minimum boom angle (deg.) for indicated length (no load)				24	35	40	43	45	47
		om length (ft.) ngle (no load				6	51		

NOTE: ( ) Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

	Lifting Capacities On Outriggers 50% Extended - 360° At Zero Degree Boom Angle										
Boom		Main Boom Length in Feet									
Angle	35	55	61								
0°	27,400 (28.2)	8,500 (47.4)	5,850 (53.8)								

NOTE: ( ) Reference radii in feet.

	Boom Extension Sequence in %										
Inner-Mid	Inner-Mid 0 50 50 75 100 100 100 100 100										
Mid	0	25	50	75	100	100	100	100	100		
Outer-Mid	0	0	0	0	0	25	50	75	100		
Fly	0	0	0	0	0	25	50	75	100		

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

A6-829-014849A

31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 125 FT. MAIN BOOM ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	ENGTH
Radius in	#4021	#4023	#4041	#4043
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET
30	*11,500 (80)			
35	11,500 (78.5)			
40	11,500 (77)		6,950 (79.5)	
45	11,500 (75)	*8,000 (80)	6,780 (78.5)	
50	11,000 (73.5)	6,810 (78.5)	6,620 (77)	
60	8,070 (70)	6,490 (74.5)	6,290 (74)	
70	5,580 (66)	6,400 (70.5)	5,960 (71)	*3,700 (80)
80	3,710 (62)	5,080 (66)	4,390 (67.5)	3,520 (76.5)
90	2,100 (57.5)	3,130 (61.5)	2,940 (64.5)	3,400 (72.5)
100	$\overline{\Lambda}$	1,610 (56.5)	1,790 (60.5)	3,290 (68.5)
110				2,430 (64)
120				1,230 (59.5)
0.1A (lbs.)	990	900	910	810
Minimum boom angle (deg.) for indicated length (no load)	53	55	57	58
Maximum boom length (ft.) at 0° boom angle (no load)	6	i <b>1</b>	3	5

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions. \*This capacity is based upon maximum boom angle.

1. All capacities above the bold line are based on structural strength of boom extension. Capacities correspond to SAE J1289 (Test Load = 1.25P + 0.1A). 0.1A represents one-tenth (0.10) of the total boom weight reduced to the boom point.

A6-829-014902A

- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths less than 125 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

31 FT. - 56 FT. FOLDING BOOM EXTENSION USING 138 FT. MAIN BOOM ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360° WITH COUNTERWEIGHT

	31 FT. L	ENGTH	56 FT. L	ENGTH	
Radius in	#4021	#4023	#4041	#4043	
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET	
35	9,500 (79.5)				
40	9,500 (78)		*5,500 (80)		
45	9,500 (76.5)		5,400 (79.5)		
50	9,500 (75)	*7,800 (80)	5,300 (78)		
60	8,220 (71.5)	6,740 (77)	5,100 (75.5)		
70	5,760 (68.5)	6,460 (73.5)	4,900 (72.5)	*3,600 (80)	
80	3,920 (64.5)	5,450 (69.5)	4,460 (69.5)	3,500 (77.5)	
90	2,480 (60.5)	3,690 (65.5)	3,030 (66.5)	3,400 (74)	
100	1,220 (56.5)	2,140 (61)	1,890 (63.5)	3,300 (70.5)	
110				2,280 (67)	
120				1,230 (63)	
0.1A (lbs.)	960	880	900	810	
Minimum boom angle (deg.) for indicated length (no load)	53	57	59	61	
Maximum boom length (ft.) at 0° boom angle (no load)	6	51	35		

NOTE: ( ) Boom angles are in degrees.

A6-829-014901B

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension. Capacities correspond to SAE J1289 (Test Load = 1.25P + 0.1A). 0.1A represents one-tenth (0.10) of the total boom weight reduced to the boom point.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths between 125 ft. and fully extended with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

# RATED LIFTING CAPACITIES IN POUNDS WITH COUNTERWEIGHT 35 FT. - 138 FT. BOOM

# ON OUTRIGGERS 0% EXTENDED (10' 4" SPREAD) - 360°

Radius					#8001							
in		Main Boom Length in Feet										
Feet	35	55	61	74	87	99	112	125	138			
10	86,700 (65.5)	71,750 (76)	69,000 (77.5)	*57,050 (80)								
12	65,550 (62)	55,400 (73.5)	53,700 (75.5)	49,100 (78.5)	*43,300 (80)							
15	46,750 (56)	40,050 (70)	39,200 (72.5)	36,150 (76)	33,550 (78.5)	*32,100 (80)						
20	29,400 (44.5)	25,650 (64.5)	25,350 (67.5)	23,500 (71.5)	21,950 (75)	22,400 (77.5)	*22,550 (80)	*20,150 (80)				
25	19,100 (29.5)	17,450 (58)	17,400 (62)	16,050 (67.5)	14,950 (71.5)	15,750 (74.5)	16,200 (77)	16,450 (79)	*16,550 (80)			
30		11,450 (51)	12,150 (56.5)	11,150 (63)	10,300 (68)	11,250 (71.5)	11,850 (74.5)	12,250 (76.5)	12,500 (78.5)			
35		7,350 (43.5)	7,950 (50)	7,540 (58.5)	6,980 (64)	8,020 (68.5)	8,730 (71.5)	9,230 (74)	9,580 (76.5)			
40		4,420 (34.5)	4,940 (43)	4,460 (53.5)	4,430 (60)	5,570 (65)	6,350 (69)	6,910 (72)	7,320 (74)			
45		2,240 (21.5)	2,690 (35)	2,150 (48.5)	2,160 (56)	3,290 (61.5)	4,410 (66)	5,080 (69)	5,530 (72)			
50						1,500 (58.5)	2,590 (63)	3,600 (66.5)	4,080 (69.5)			
60									1,880 (65)			
0.1A (lbs.)	1,270	1,340	1,310	1,330	1,350	1,230	1,140	1,070	1,010			
	n boom ang ated length (		25	44	53	56	59	62	62			
		boom length (ft.) 55										

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions. \*This capacity is based upon maximum boom angle.

	Lifting Capacities On Outriggers 0% Extended - 360° At Zero Degree Boom Angle									
Boom		Main Boom Length in Feet								
Angle	35	55								
0°	14,950 (28.2)	1,390 (47.4)								

NOTE: ( ) Reference radii in feet.

	Boom Extension Sequence in %										
Inner-Mid	0	50	50	75	100	100	100	100	100		
Mid	0	25	50	75	100	100	100	100	100		
Outer-Mid	0	0	0	0	0	25	50	75	100		
Fly	0	0	0	0	0	25	50	75	100		

-

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

A6-829-014851A

# RATED LIFTING CAPACITIES ON RUBBER WITH COUNTERWEIGHT 33.25x29 GENERAL TIRES

STATIONARY CAPACITIES - 360°									
Radius			#9005						
in	Main Boom Length in Feet								
Feet	35	55	61	74	87				
10	45,200 (65.5)	40,850 (76)							
12	43,100 (62)	40,850 (73.5)							
15	29,400 (56)	29,400 (70)	29,400 (72.5)	29,400 (76)					
20	17,750 (44.5)	17,750 (64.5)	17,750 (67.5)	17,750 (71.5)	17,750 (75)				
25	11,300 (29.5)	11,300 (58)	11,300 (62)	11,300 (67.5)	11,300 (71.5)				
30		7,300 (51)	7,300 (56.5)	7,300 (63)	7,300 (68)				
35		4,520 (43.5)	4,520 (50)	4,520 (58.5)	4,520 (64)				
40		2,290 (34.5)	2,290 (43)	2,290 (53.5)	2,290 (60)				
Minimum boom angle indicated length (		31	40	50	58				
Maximum boom ler 0 degree boom angl		35							

## STATIONARY CAPACITIES - 360°

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.

Capacities at Zero Degree Boom Angle									
Boom Angle		Main Boom Length in Feet							
	35								
0°	9,350 (28.2)								
NOTE () Deference	1997 A. 1				000 015116				

NOTE: () Reference radii in feet.

A6-829-015116

- 1. Capacities do not exceed 75% of tipping loads as determined by test in accordance with SAE J765.
- 2. Capacities are applicable to machines equipped with 33.25x29 (32 ply) General tires at 65 psi cold inflation pressure.
- 3. Defined Arc Over front includes  $6^{\circ}$  on either side of longitudinal centerline of machine.
- 4. Capacities appearing above the bold line are based on structural strength and tipping should not be relied upon as a capacity limitation.
- 5. Capacities are applicable only with machine on firm level surface.
- 6. On rubber lifting with boom extensions not permitted.
- 7. For pick and carry operation, boom must be centered over front of machine, mechanical swing lock engaged and load restrained from swinging. When handling loads in the structural range with capacities close to maximum ratings, travel should be reduced to creep speeds.
- 8. Axle lockouts must be functioning when lifting on rubber.
- 9. All lifting depends on proper tire inflation, capacity and condition. Capacities must be reduced for lower tire inflation pressures. See lifting capacity chart for tire used. Damaged tires are hazardous to safe operation of crane.
- 10. Creep not over 200 ft. of movement in any 30 minute period and not exceeding 1 mph.

# RATED LIFTING CAPACITIES ON RUBBER (cont'd.)

## PICK & CARRY CAPACITIES - UP TO 2.5 MPH BOOM CENTERED OVER FRONT (SEE NOTE 7)

Radius	#9006								
in		Main B	oom Length	in Feet					
Feet	35	55	61	74	87				
10	45,200 (65.5)	29,150 (76)							
12	45,200 (62)	29,150 (73.5)							
15	37,250 (56)	29,150 (70)	26,900 (72.5)	18,150 (76)					
20	30,600 (44.5)	29,150 (64.5)	26,900 (67.5)	18,150 (71.5)	12,400 (75)				
25	20,250 (29.5)	20,250 (58)	20,250 (62)	18,150 (67.5)	12,400 (71.5)				
30		14,400 (51)	14,400 (56.5)	14,440 (63)	12,400 (68)				
35		10,650 (43.5)	10,650 (50)	10,650 (58.5)	10,650 (64)				
40		7,940 (34.5)	7,940 (43)	7,940 (53.5)	7,940 (60)				
45		5,920 (21.5)	5,920 (35)	5,920 (48.5)	5,920 (56)				
50			4,380 (24.5)	4,380 (42.5)	4,380 (52)				
60				2,160 (28)	2,160 (42.5)				
Minimum	boom angle	(deg.) for ind	icated length	(no load)	40				
Maximum t	boom length (	ft.) at 0 degre	ee boom ang	le (no load)	74				

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.

Capacities at Zero Degree Boom Angle									
Boom Angle	Main Boom Length in Feet								
	35	55	61	74					
0°	16,500 (28.2)	5,140 (47.4)	3,430 (53.8)	1,110 (66.6)					

NOTE: () Reference radii in feet.

A6-829-015118

# RATED LIFTING CAPACITIES ON RUBBER WITH COUNTERWEIGHT 33.25Rx29 GENERAL TIRES

## STATIONARY CAPACITIES DEFINED ARC OVER FRONT (SEE NOTE 3)

Radius			#9005						
in	Main Boom Length in Feet								
Feet	35	55	61	74	87				
10	45,200 (65.5)	40,850 (76)							
12	45,200 (62)	40,850 (73.5)	40,850 (75.5)						
15	45,200 (56)	40,850 (70)	40,850 (72.5)	34,400 (76)					
20	40,850 (44.5)	40,850 (64.5)	40,850 (67.5)	34,400 (71.5)	24,050 (75)				
25	27,000 (29.5)	27,100 (58)	27,100 (62)	27,100 (67.5)	24,050 (71.5)				
30		19,200 (51)	19,200 (56.5)	19,200 (63)	19,200 (68)				
35		14,200 (43.5)	14,200 (50)	14,200 (58.5)	14,200 (64)				
40		10,550 (34.5)	10,550 (43)	10,550 (53.5)	10,550 (60)				
45		7,905 (21.5)	7,905 (35)	7,905 (48.5)	7,905 (56)				
50			5,840 (24.5)	5,840 (42.5)	5,840 (52)				
60				2,880 (28)	2,880 (42.5)				
Minimum	Minimum boom angle (deg.) for indicated length (no load)								
Maximum t	boom length (	(ft.) at 0 degr	ee boom ang	le (no load)	74				

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.

Capacities at Zero Degree Boom Angle								
Boom Angle	Main Boom Length in Feet							
	35	55	61	74				
0°	22,000 (28.2)	6,860 (47.4)	4,570 (53.8)	1,480 (66.6)				

NOTE: () Reference radii in feet.

A6-829-015117

15

# RATED LIFTING CAPACITIES IN POUNDS WITHOUT COUNTERWEIGHT 35 FT. - 138 FT. BOOM

Radius					#0801				
in				Main Bo	oom Length	in Feet			
Feet	35	55	61	74	87	99	112	125	138
10	122,000 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)					
12	104,500 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)				
15	85,800 (56)	79,100 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)			
20	63,400 (44.5)	62,150 (64.5)	59,850 (67.5)	44,350 (71.5)	39,550 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)	
25	46,000 (29.5)	44,900 (58)	45,200 (62)	38,750 (67.5)	33,800 (71.5)	32,100 (74.5)	30,050 (77)	20,150 (79)	*19,000 (80)
30		34,100 (51)	34,400 (56.5)	34,150 (63)	29,200 (68)	30,200 (71.5)	27,350 (74.5)	19,100 (76.5)	18,300 (78.5)
35		26,750 (43.5)	27,000 (50)	26,800 (58.5)	25,800 (64)	26,600 (68.5)	24,300 (71.5)	18,100 (74)	17,650 (76.5)
40		21,350 (34.5)	21,650 (43)	21,450 (53.5)	21,300 (60)	22,600 (65)	21,600 (69)	17,250 (72)	17,000 (74)
45		16,200 (21.5)	16,750 (35)	16,100 (48.5)	16,150 (56)	17,400 (61.5)	18,700 (66)	16,450 (69)	16,350 (72)
50			12,900 (24.5)	12,200 (42.5)	12,250 (52)	13,500 (58.5)	14,750 (63)	15,750 (66.5)	15,700 (69.5)
60				6,830 (28)	6,950 (42.5)	8,140 (51)	9,360 (57)	10,550 (61.5)	11,800 (65)
70					3,450 (30)	4,620 (42.5)	5,810 (50)	7,020 (56)	8,230 (60)
80						2,080 (32)	3,310 (42.5)	4,490 (49.5)	5,690 (55)
90							1,400 (33.5)	2,610 (43)	3,790 (49.5)
100								1,160 (35)	2,330 (43)
110									1,170 (36)
/linimum b	linimum boom angle (deg.) for indicated length (no load)			th (no load)	22	27	31	33	34
/laximum b	boom length	(ft.) at $0^{\circ}$ bo	oom angle (	no load)			74		

# ON OUTRIGGERS FULLY EXTENDED - 360°

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

	Lifting Capacities On Outriggers Fully Extended - 360° At Zero Degree Boom Angle									
Boom				Main B	oom Length	in Feet				
Angle	35	55	61	74						
0°	27,400 (28.2)	12,850 (47.4)	10,400 (53.8)	4,370 (66.6)						
NOTE: ( ) F	Reference ra	adii in feet.			-	-		A6-82	9-014848A	
			Boom	Extension	n Sequenco	e in %				
Inner-Mid	0	50	50	75	100	100	100	100	100	
Mid	0	25	50	75	100	100	100	100	100	
Outer-Mid	0	0	0	0	0	25	50	75	100	
Fly	0	0	0	0	0	25	50	75	100	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

# 31 FT. - 56 FT. FOLDING BOOM EXTENSION WITHOUT COUNTERWEIGHT USING 125 FT. MAIN BOOM ON OUTRIGGERS FULLY EXTENDED - 360°

	31 FT. L	ENGTH	56 FT. L	.ENGTH	
Radius in	#0821	#0823	#0841	#0843	
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET	
30	*11,500 (80)				
35	11,500 (78.5)				
40	11,500 (77)		6,950 (79.5)		
45	11,500 (75)	*8,000 (80)	6,780 (78.5)		
50	11,000 (73.5)	6,810 (78.5)	6,620 (77)		
60	10,050 (70)	6,490 (74.5)	6,290 (74)		
70	9,220 (66)	6,400 (70.5)	5,960 (71)	*3,700 (80)	
80	6,670 (62)	6,350 (66)	5,640 (67.5)	3,520 (76.5)	
90	4,650 (57.5)	5,710 (61.5)	5,260 (64.5)	3,400 (72.5)	
100	3,080 (53)	3,860 (56.5)	4,270 (60.5)	3,290 (68.5)	
110	1,830 (47.5)	2,380 (51)	2,900 (56.5)	3,190 (64)	
120			1,790 (52)	3,110 (59.5)	
130				1,920 (54)	
Minimum boom angle (deg.) for indicated length (no load)	42	46	48	51	
Maximum boom length (ft.) at 0 degree boom angle (no load)	7	4	61		

NOTE: ( ) Boom angles are in degrees.

A6-829-014900

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

- 1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.
- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths less than 125 ft. with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

# 31 FT. - 56 FT. FOLDING BOOM EXTENSION WITHOUT COUNTERWEIGHT USING 138 FT. MAIN BOOM ON OUTRIGGERS FULLY EXTENDED - 360°

	31 FT. L	ENGTH	56 FT. L	ENGTH	
Radius in	#0821	#0823	#0841	#0843	
Feet	1.5° OFFSET	45° OFFSET	1.5° OFFSET	45° OFFSET	
35	9,500 (79.5)				
40	9,500 (78)		*5,500 (80)		
45	9,500 (76.5)		5,400 (79.5)		
50	9,500 (75)	*7,800 (80)	5,300 (78)		
60	9,110 (71.5)	6,740 (77)	5,100 (75.5)		
70	8,450 (68.5)	6,460 (73.5)	4,900 (72.5)	*3,600 (80)	
80	7,210 (64.5)	6,350 (69.5)	4,700 (69.5)	3,500 (77.5)	
90	5,100 (60.5)	6,280 (65.5)	4,500 (66.5)	3,400 (74)	
100	3,470 (56.5)	4,420 (61)	4,300 (63.5)	3,300 (70.5)	
110	2,170 (52)	2,910 (56.5)	3,210 (59.5)	3,200 (67)	
120	1,120 (47)	1,680 (51)	2,170 (56)	3,090 (63)	
130			1,260 (52)	2,040 (58.5)	
140				1,160 (53.5)	
Minimum boom angle (deg.) for indicated length (no load)	46 49		50	52	
Maximum boom length (ft.) at 0° boom angle (no load)	7	<sup>2</sup> 4	61		

NOTE: ( ) Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions.

\*This capacity is based upon maximum boom angle.

1. All capacities above the bold line are based on structural strength of boom extension and do not exceed 85% of tipping loads, in accordance with SAE J-765.

A6-829-014899A

- 2. 31 ft. and 56 ft. folding boom extension lengths may be used for single line lifting service only.
- 3. For main boom lengths between 125 ft. and fully extended with the boom extension erected, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is set up. For boom angles not shown, use rating of the next lower boom angle.
- 4. WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.
- 5. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 6. Capacities listed are with outriggers properly extended and vertical jacks set only.

# RATED LIFTING CAPACITIES IN POUNDS WITHOUT COUNTERWEIGHT 35 FT. - 138 FT. BOOM

# ON OUTRIGGERS 50% EXTENDED (17' 4" SPREAD) - 360°

Radius					#4801		_AD) = 000	-	
in				Main B	oom Length	in Feet			
Feet	35	55	61	74	87	99	112	125	138
10	112,500 (65.5)	79,100 (76)	78,450 (77.5)	*57,050 (80)					
12	99,350 (62)	79,100 (73.5)	77,500 (75.5)	57,050 (78.5)	*43,300 (80)				
15	84,050 (56)	73,500 (70)	69,850 (72.5)	51,650 (76)	43,300 (78.5)	*32,100 (80)			
20	50,150 (44.5)	44,350 (64.5)	43,550 (67.5)	40,400 (71.5)	37,800 (75)	32,100 (77.5)	*30,050 (80)	*20,150 (80)	
25	30,950 (29.5)	29,150 (58)	29,650 (62)	27,650 (67.5)	26,000 (71.5)	26,550 (74.5)	26,750 (77)	20,150 (79)	*19,000 (80)
30		19,250 (51)	20,050 (56.5)	19,700 (63)	18,650 (68)	19,500 (71.5)	19,950 (74.5)	19,100 (76.5)	18,300 (78.5)
35		13,100 (43.5)	13,800 (50)	13,300 (58.5)	13,200 (64)	14,450 (68.5)	15,250 (71.5)	15,700 (74)	15,950 (76.5)
40		8,950 (34.5)	9,520 (43)	8,990 (53.5)	8,960 (60)	10,150 (65)	11,300 (69)	12,300 (72)	12,650 (74)
45		5,930 (21.5)	6,420 (35)	5,840 (48.5)	5,850 (56)	7,030 (61.5)	8,200 (66)	9,380 (69)	10,100 (72)
50			4,070 (24.5)	3,450 (42.5)	3,490 (52)	4,660 (58.5)	5,820 (63)	6,980 (66.5)	8,130 (69.5)
60						1,310 (51)	2,450 (57)	3,590 (61.5)	4,730 (65)
70								1,310 (56)	2,440 (60)
0.1A (lbs.)	1,270	1,340	1,310	1,330	1,350	1,230	1,140	1,070	1,010
Minimum boo load)	Minimum boom angle (deg.) for indicated length (no oad)			30	43	48	51	54	56
Maximum boom length (ft.) at 0 degree boom angle (no load)						6	51		

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for instructions. \*This capacity is based upon maximum boom angle.

	Lifting Capacities On Outriggers 50% Extended - 360° At Zero Degree Boom Angle								
Boom		Main Boom Length in Feet							
Angle	35	55	61						
0°	23,900 (28.2)	4,780 (47.4)	2,660 (53.8)						

#### NOTE: ( ) Reference radii in feet.

A6-829-014850A

	Boom Extension Sequence in %									
Inner-Mid	0	50	50	75	100	100	100	100	100	
Mid	0	25	50	75	100	100	100	100	100	
Outer-Mid	0	0	0	0	0	25	50	75	100	
Fly	0	0	0	0	0	25	50	75	100	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

LIFTING OFF MAIN BOOM NOSE (35 FT 138 FT. BOC	LIFTING OFF MAIN BOOM NOSE (35 FT 138 FT. BOOM) WITH:						
25 ft. Fly Section (Stowed on Boom Base Section))	440 lbs.						
31 ft. Fixed Extension (Stowed on Boom Base Section))	1,110 lbs.						
31 ft. Fixed Extension (Erected)	4,830 lbs.						
31-56 ft. Folding Extension (Stowed on Boom Base Section)	1,550 lbs.						
31-56 ft. Folding Extension (Erected)	10,700 lbs.						
LIFTING OFF 31 FT. BOOM EXTENSION WITH	:						
25 ft. Fly Section (Stowed on Boom Base Section)	440 lbs.						
25 ft. Fly Section (Erected)	Not Permitted						
25 ft. Fly Section (Stowed on 31 ft. Extension) Not I							
*Reduction of main boom capacities	*Reduction of main boom capacities						

AUXILIARY BOOM NOSE	127 lbs.
HOOKBLOCKS and HEADACHE BALLS:	
75 Ton, 6 Sheave w/cheekplates	2,299 lbs.+
75 Ton, 6 Sheave w/o cheekplates	1,711 lbs.+
45 Ton, 3 Sheave w/cheekplates	1,095 lbs.+
45 Ton, 3 Sheave w/o cheekplates	830 lbs.+
15 Ton, 1 Sheave	423 lbs.+
10 Ton Headache Ball	560 lbs.+

+Refer to rating plate for actual weight.


When lifting over swingaway and/or jib combinations, deduct total weight of all load handling devices reeved over main boom nose directly from swingaway or jib capacity.


NOTE: All load handling devices and boom attachments are considered part of the load and suitable allowances MUST BE MADE for their combined weights. Weights are for Grove furnished equipment.

TIRE INFLATION - PSI (BAR)				
SIZE (FRONT & REAR)	TRA CODE	LIFTING SERVICE , GENERAL TRAVEL AND EXTENDED TRAVEL		
		STATIC, CREEP & 2.5 MPH (4.0 KPH)		
MICHELIN 33.25R29 XRB**		75 (5.2)		
33.25x29 (32)	E-3	65 (4.5) (SEE OPERATOR'S MANUAL FOR EXTENDED ROADING)		

LINE PULLS AND R	<b>EEVING INFORMATION</b>
------------------	---------------------------

HOISTS	CABLE SPECS.	PERMISSIBLE LINE PULLS	NOMINAL CABLE LENGTH
Main & Aux. Model 30	3/4" (19 mm) 18x19Class or 35x7 Rotation Resistant Min. Breaking Str. 64,600 lbs.	12,920 lbs.	620 ft.
Main & Aux. Model 30	3/4" (19 mm) 6x37 Class EIPS IWRC Special Flexible Min. Breaking Str. 58,800 lbs.	12,920 lbs.	620 ft.

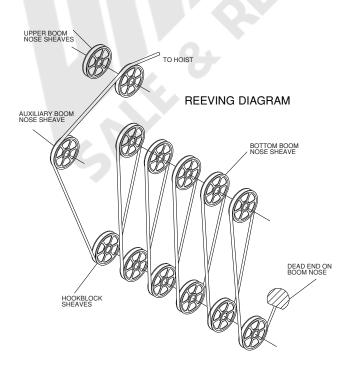

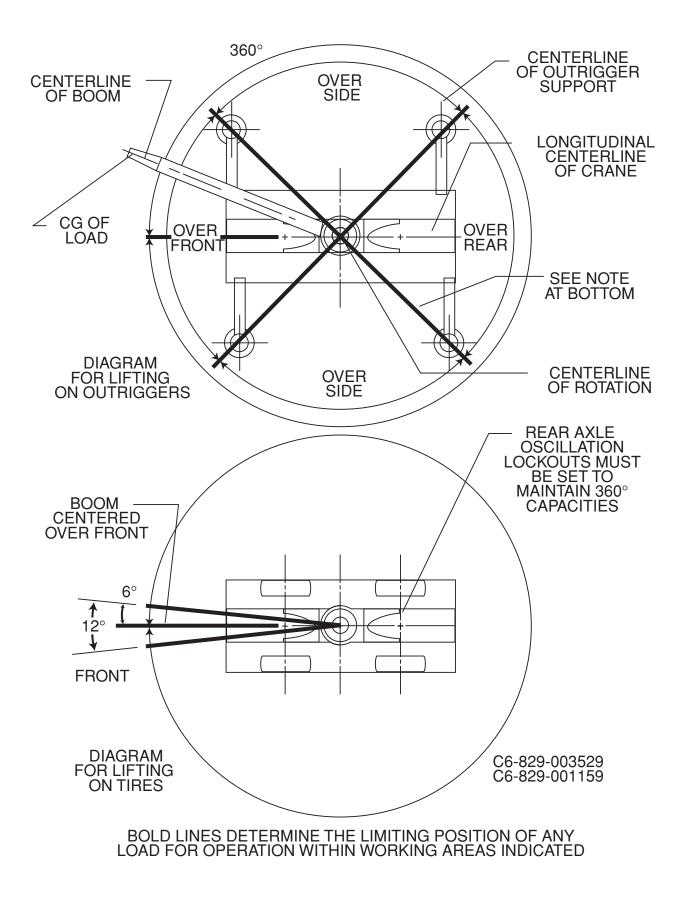



#### Grove Worldwide - World

Headquarters 1565 Buchanan Trail East P.O. Box 21 Shady Grove, Pennsylvania 17256, U.S.A. Tel: [Int + 1] (717) 597-8121 Fax: [Int + 1] (717) 597-4062 Western Hemisphere, Asia/Pacific

Grove Europe Limited\* Europe, Africa, Middle East (Sales & Marketing) P.O. Box 349 Sunderland SR4 6YF, England Tel: [Int + 44] (191) 515-7253 Fax: [Int + 44] (191) 564-0442

Grove Europe Limited\* UK & EIRE (Sales & Service) Telford Road, Bicester Oxfordshire OX6 0TZ, England Tel: [Int + 44] (1869) 878-890 Fax: [Int + 44] (1869) 878-891

Deutsche Grove GmbH Germany (Sales & Service) Helmholtzstrasse 12, Postfach 5026 D-40750 Langenfeld, Germany Tel: [Int + 49] (2173) 8909-0 Fax: [Int + 49] (2173) 8909-30

Deutsche Grove GmbH Wilhelmshaven Works Industriegelande West, Postfach 1853 D-26358 Wilhelmshaven, Germany Tel: [Int + 49] (4421) 294-0 Fax: [Int + 49] (4421) 294-301

Grove France S.A. France (Sales & Service) 16, ChaussÈe Jules-CÈsar, 95520 OSNY B.P. 203, 95523 CERGY PONTOISE CEDEX France Tel: [Int + 33] (1) 303-13150 Fax: [[Int + 33] (1) 303-86085

#### Grove Asia/Pacific - Regional Office

171 Chin Swee Road #10-09 San Centre Singapore 16987 Tel: [Int + 65] 536-6112 Fax: [Int + 65] 536-6119 *Asia/Pacific, Near East* 

#### Grove China - Representative Office

Room 713, Towercrest Plaza No. 3 Mai Zi Dian West Road Chao Yang District Beijing, China 100016 Tel: [Int + 86] (10) 64 67 16 90 Fax: [Int + 86] (10) 64 67 16 91

**Grove Middle East** 

P.O. Box 290 Dubai, United Arab Emirates Tel: (Int + 971) (4) 484478 Fax: (Int + 971) (4) 484478

#### Lifetime Customer Support

Western Hemisphere, Asia/Pacific 1086 Wayne Avenue Chambersburg, Pennsylvania USA Tel: [Int + 1] (717) 263-5100 Fax: [Int + 1] (717) 267-0404 *Europe, Africa, Middle East* 

#### Grove Europe Limited\* P.O. Box 351

Sunderland SR4 6YQ, England Tel: [Int + 44] (191) 565-6281 Parts Fax: [Int + 44] (191) 515-7475 Service Fax: [Int + 44] (191) 515-7340

\*Grove Europe Limited, Registered in England, Number 1845128, Registered office, Crown Works, Pallion, Sunderland, Tyne & Wear, England SR4 6TT

http://www.groveworldwide.com

Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories and may not include all standard equipment.

Distributed By: